

MODEL: 90371

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

TOOLS

YOU WILL NEED THE FOLLOWING TOOLS AND EQUIPMENT:
LADDER, SCREWDRIVER, ADJUSTABLE WRENCH, WIRE CUTTERS, PLIERS.

UNPACK THE FIXTURE

TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE. YOU SHOULD HAVE RECEIVED THE FOLLOWING:
FIXTURE FRAME, GLASS BOWL, CANOPY, SWIVEL, CONNECTOR, RETAINER RING, FONT AND FINIAL.

MOUNTING HARDWARE PACKAGE:

NIPPLE, CROSSBAR, GREEN GROUND SCREW, (2) WIRE CONNECTORS, (4) 8-32 x 1 1/4" SCREWS, NUT

PENDANT ASSEMBLY


1. SLIDE RETAINER RING WITH SCREW THEN CANOPY DOWN SUSPENSION ROD.
2. IF MOUNTING TO A VAULTED CEILING, ATTACH SWIVEL, CONNECTOR AND NIPPLE TO TOP OF SUSPENSION ROD. IF MOUNTING TO A FLAT CEILING, SCREW NIPPLE INTO TOP OF SUSPENSION ROD.
3. LOOSEN THE SET SCREW SO THAT IT IS NOT TIGHT AGAINST THE SUSPENSION ROD. SLIDE SUSPENSION ROD TO DESIRED HEIGHT AND TIGHTEN SET SCREW. IT MAY BE NECESSARY TO KEEP THE WIRE SLIGHTLY TAUGHT TO PREVENT BINDING WHILE MAKING THE HEIGHT ADJUSTMENT.

****STOP** COMPLETE INSTALLATION INSTRUCTIONS ON REVERSE SIDE BEFORE PROCEEDING.**

4. INSTALL 100 WATT MAXIMUM MEDIUM BASE BULBS (NOT INCLUDED) INTO SOCKETS.
5. RAISE GLASS BOWL TO STABILIZER AND FEED THREADED ROD THROUGH HOLE IN CENTER OF GLASS BOWL.
6. SECURE GLASS BOWL TO FIXTURE WITH FONT AND FINIAL.
7. RESTORE POWER. YOUR FIXTURE IS NOW READY TO USE.

AVAILABLE PART IS:
90371GS (BOWL)



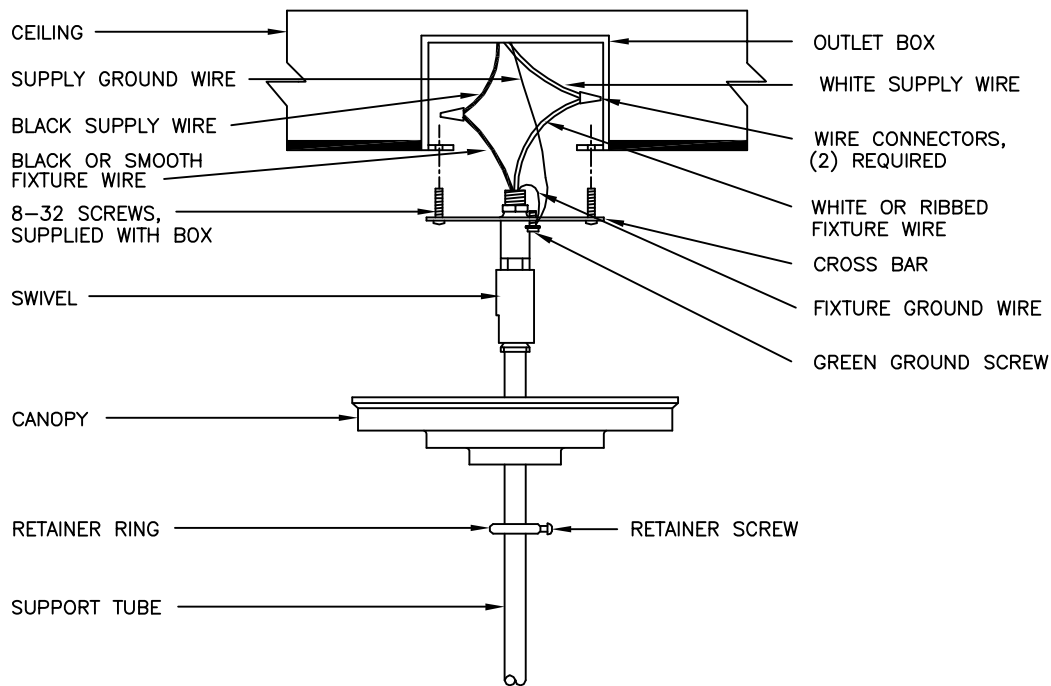

PENDANT

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

CAUTION:

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES. IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

** THIS FIXTURE IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

***NOTE: COMPLETE ASSEMBLY INSTRUCTIONS BEFORE DOING INSTALLATION INSTRUCTIONS.

1. SCREW CROSSBAR TO NIPPLE ON TOP OF SWIVEL AND SECURE WITH NUT.
2. ATTACH THE CROSS BAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1 1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).
3. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTORS PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. ATTACH THE FIXTURE AND SUPPLY GROUND WIRES ONTO THE CROSS BAR USING THE GREEN GROUND SCREW. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX.
4. RAISE THE CANOPY AND RETAINER RING TO COVER THE OUTLET BOX AND SECURE BY TIGHTENING SCREW IN RETAINER RING.
5. COMPLETE ASSEMBLY INSTRUCTIONS ON REVERSE SIDE.

